

OPERATING THE ELECTRONIC DIGITAL SAFE

NOTE

Factory preset PIN is 159B

To program your Personal Identification Number ("PIN") – 3 to 8 DIGITS.

4 AA-size batteries are needed to operate the safe.

- 1 Open safe by inputting the factory preset PIN (i.e.159B).
- 2 Press the red button on the inside edge of the door, then yellow light on the keypad come on.
- 3 Now select your PIN digit, and then press the letter "B" to confirm your PIN. A beep will sound for each key pressed. After the letter "B" is pressed, the yellow light goes out to indicate your success. Be sure to write down this code immediately, so you do not forget.

TO OPERATE SAFE

- 1 To Open the safe: Input your own PIN (i.e. the number you have selected) then press the letter "B". Turn handle clockwise and the safe will open.
- 2 After entering your PIN, you have 5 seconds to turn the handle before the mechanism relocks, if it relocks, please enter your PIN again. Don't forget to press the letter "B" after entering your PIN.

CAUTION: If you or an intruder uses the incorrect group of numbers, it will not open and a yellow light goes on. Entering an incorrect PIN 3 times will freeze the system for 20 seconds.

IMPORTANT

- 1 If you forget your code, you can use the manual override key: DO NOT keep override Key in Safe. To use the override key, remove the small cover in the center of the control panel. Pull panel outwards to expose override lock. Turn key anticlockwise fully and turn knob clockwise to open the safe.
- 2 Please make a note of the following details and keep independent of safe as these details will be needed if a service call is required: The Key Number and the Safe Number (The safe number is either on a small sticker beside the override lock cover or on the head of emergency lock).
- 3 A red light showing on the top right of the control panel indicates low batteries. Change batteries by removing the sliding battery housing cover at the back of the door, then replace all batteries.
- 4 If the digital lock do not work because of low battery, use the override key to open the safe, and then replace all batteries.